




Samsung DV300F Back Button Control Replacement

This guide will serve as a replacement guide for the Back Button Control.

Written By: Timothy Gordon

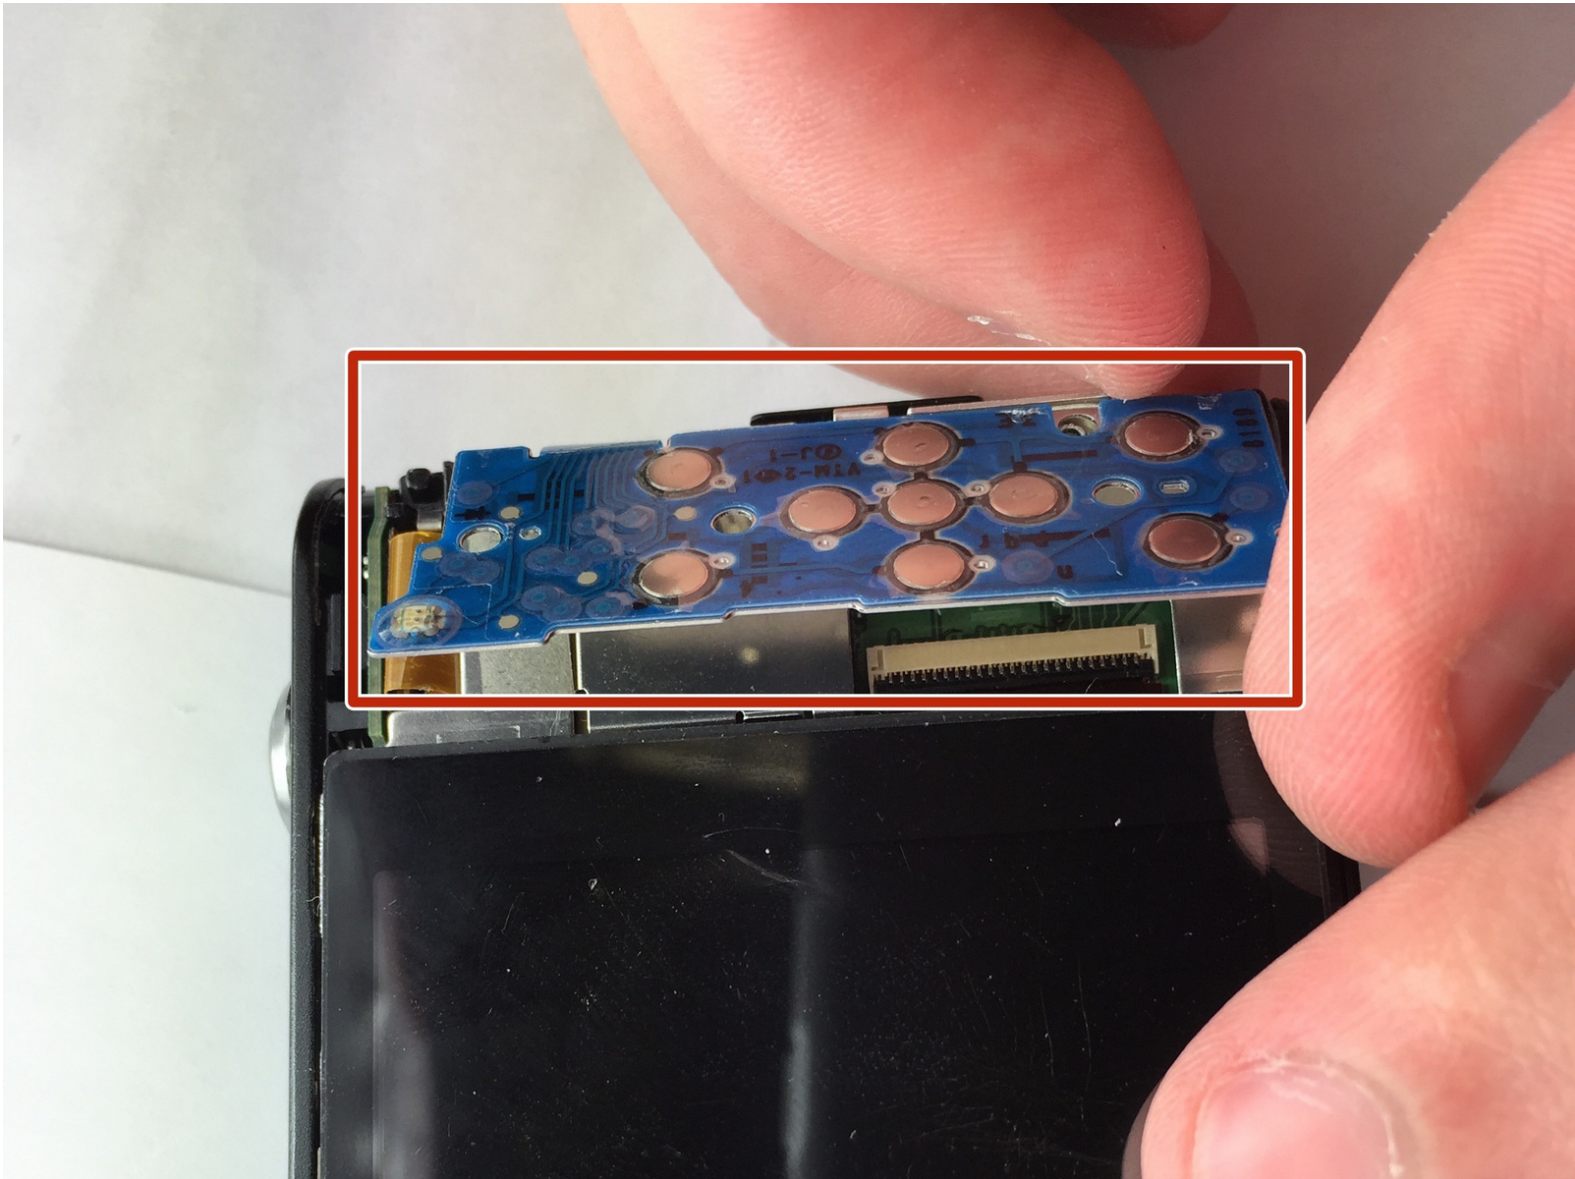

INTRODUCTION

This guide will show how to remove the Back Button Control.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Rear Casing




- Remove the two black Phillips 4.2mm on the right side of the camera by using a #0 screw
- Remove the two black Phillips 4.2mm on the left side of the camera by using a #0 screw
- Remove the black Phillips 4.2mm on the bottom of the camera by using a #0 screw

Step 2




- Take off the back case of the camera gently

Step 3

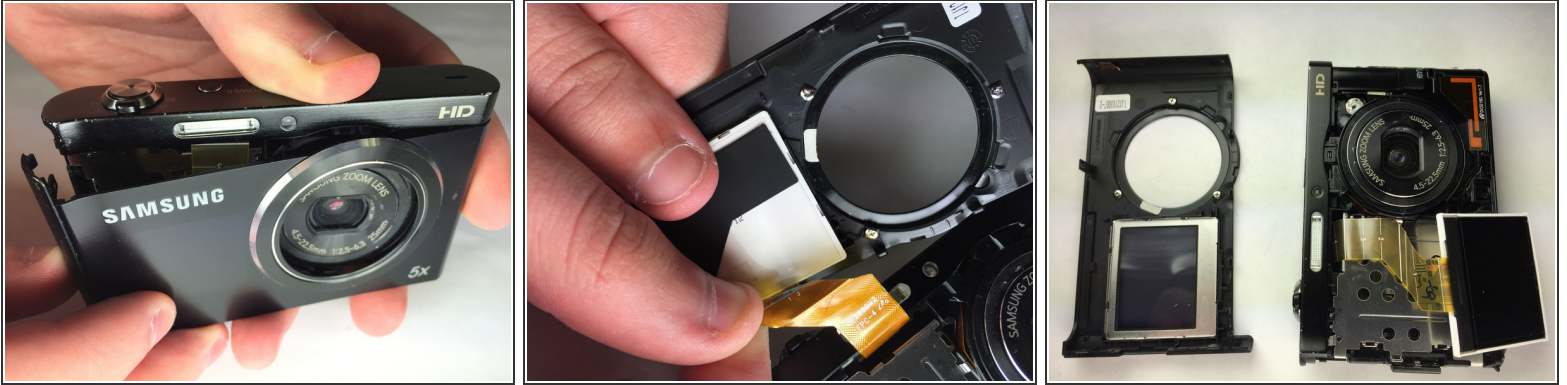

- Take off the front case of the camera gently
- Take off the front LCD gently, so the front casing is completely free

Step 4 — Back Button Control

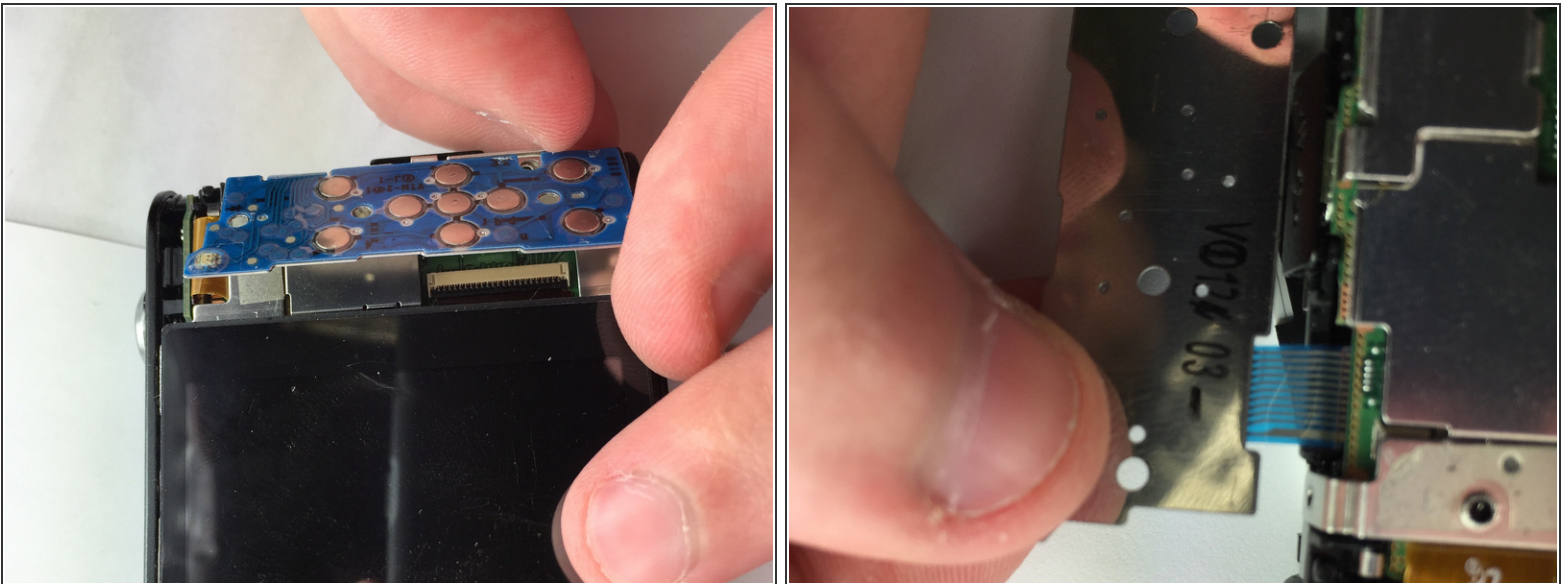

- Remove the back button control from its nesting
- Pull the tape connection to disconnect the back button control from the rest of the camera

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-09 08:03:06 PM.